


BOLT SEAL INSTALLATION AND REMOVAL PROCEDURES

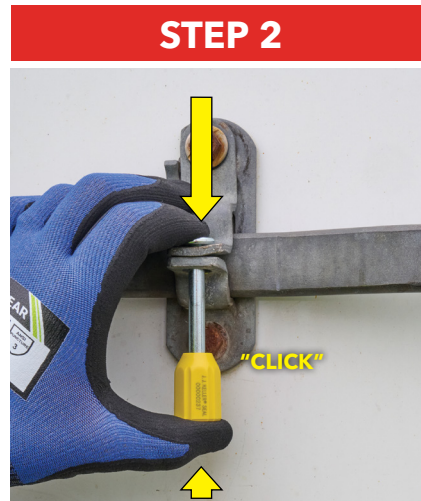

STEP 1: Insert pin through lock hasp.

STEP 2: Push the pin and barrel together until you hear a "click."

STEP 3: Pull firmly on the barrel to ensure the locking mechanism is engaged.

STEP 4: To remove the seal, cut the pin shaft with a bolt cutter; wear personal protective equipment (PPE) when cutting the seal to prevent injury.