

3.3 Metal Coils



The use of nailed blocking or cleats as the sole means to secure timbers, chocks or wedges, or a nailed wood cradle, is prohibited.


Forward tiedown:

- Attach at least one tiedown through the eye of the coil to restrain against forward motion.
 - If possible, the angle between the tiedown and the deck should be less than 45° .

Rearward tiedown:

- Attach at least one tiedown through the eye of the coil to restrain against rearward motion.

- If possible, the angle between the tiedown and the deck should be less than 45° .

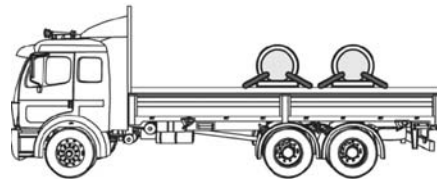

If a tiedown is used around the front of the cradle, it does not count towards the aggregate WLL for tiedowns through the eye of the coil.